

Manual: Connecting the remote control

Every Tovertafel supports multiple remote controls. You can add this extra remote control directly, without making any adjustments (see instruction A). The dongle included is only needed if you need to replace a remote control (see instruction B).

A. Adding an additional remote control

1. Make sure your Tovertafel is turned on.
2. Insert the battery (CR-2032) into the remote control.
3. Press and hold the on/off button and OK button simultaneously until the red light on the remote control stops flashing.

The remote control is now connected. Test if everything works as expected. Repeat the above steps if necessary.

B. Replacing a remote control (when the original remote is lost)

Follow these steps if you have lost the remote control and can no longer turn on your Tovertafel.

1. Insert the included USB dongle into a free USB port on the side of your Tovertafel.
2. Insert the battery (CR-2032) into the remote control.
3. Turn on your Tovertafel with the remote control.
4. Remove the USB dongle from the device. It is no longer needed.
5. Press and hold the on/off button and OK button simultaneously until the red light on the remote control stops flashing.

The remote control is now connected. Test if everything works as expected. Repeat the above steps if necessary.